
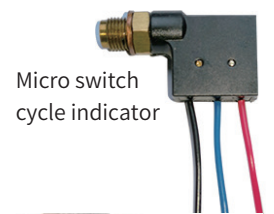


JSVB Progressive Distributor

Feature

1. The JSVB distributor acts through the plunger, and each outlet discharges the lubricant in sequence.
2. The metering volume of each outlet in each cycle is 0.2 mL.
3. Optional visual indicator rod monitoring or electronic signaling monitoring.
- 4. No outlet can be plugged, the outlet can be combined with a three-way or four-way connector.**
5. There are 6-20 outlets to choose from. The maximum number of cycles is 200/min.
6. 30-200bar is used for oil system, 300bar is used for grease system.
7. Applicable lubricants: grease NLGI 000#-2#, oil 32-220cSt@40°C.
8. Operating temperature: -20°C~+80°C.

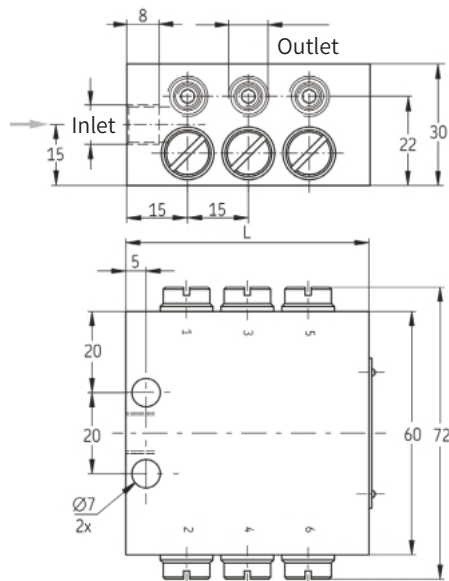

Specification

| Model | Outlets | L(mm) | Weight(kg) | Inlet dia. | Outlet dia. | Metering volume | Pressure |
|---------|---------|-------|------------|---------------------|---------------------|--------------------|------------------|
| JSVB-6 | 6 | 60 | 0.9 | Φ6 or Φ8 (M10x1) | Φ6 or Φ4 (M10x1) | 0.2mL/outlet/cycle | Grease 1.5~30MPa |
| JSVB-8 | 8 | 75 | 1.2 | | | | |
| JSVB-10 | 10 | 90 | 1.4 | | | | |
| JSVB-12 | 12 | 105 | 1.6 | | | | |
| JSVB-14 | 14 | 120 | 1.8 | | | | |
| JSVB-16 | 16 | 135 | 2.1 | | | | |
| JSVB-18 | 18 | 150 | 2.2 | | | | |
| JSVB-20 | 20 | 165 | 2.5 | | | | |

Order code

| | | | | | |
|-------------|-----------------|---------------------------------------|----------------|----------------|----------------------|
| JSVB | 6 | 01 | 8 | 6 | S |
| | Outlets | Detector | Inlet | Outlet | Hose fittings |
| | 6 = 6 outlets | 01 = No indicator | 6 = Φ6 fitting | 4 = Φ4 fitting | F = Push-in type |
| | 8 = 8 outlets | 02 = Mechanical cycle indicator | 8 = Φ8 fitting | 6 = Φ6 fitting | S = Screw-in type |
| | | 03 = Micro switch cycle indicator | | | |
| | 20 = 20 outlets | 04 = Proximity switch cycle indicator | | | |